

How to install the RO membrane



The end with 2 black rings goes in first



RO units are completely assembled, but the membrane will have to be inserted manually. The fittings may come with a blue snap ring (shaped like a C, used for locking the tube so it doesn't move). C ring is not a necessary part and will not affect the RO system. If your fitting come without C ring, just skip to step 2.

STEP 1




Remove the blue C ring

STEP 2



Push in the collet/gripper. At the same time, pull out the tube/pipe.

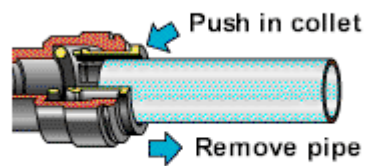


STEP 3



**Twist open the cap and insert the RO membrane
Twist the cap back in and tighten it**

STEP 4

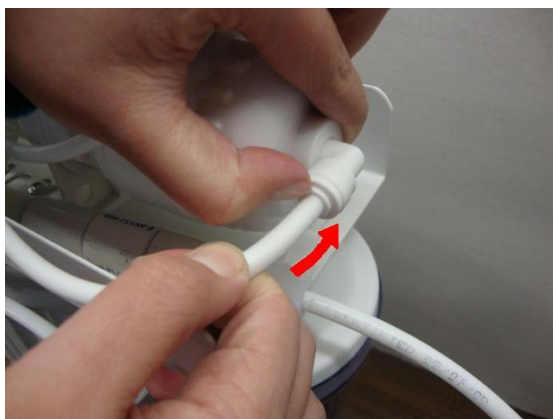

Connect the tube/pipe and push the tube/pipe in the socket all the way

STEP 5



Lock in the blue C ring