


# UV Filter Assembly



Open the cap of the UV filter housing.



Pass the power adapter cord through the UV filter cap, and then plug in the power adapter with the UV bulb.

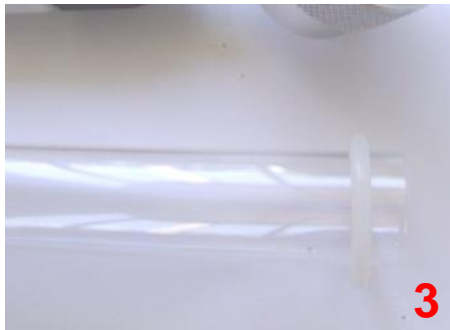

Insert O-ring onto the sleeve as shown.




Slide sleeve through the UV Bulb.



Carefully insert the UV bulb into the housing, and screw it in.



Screw in the elbow fittings on both sides.

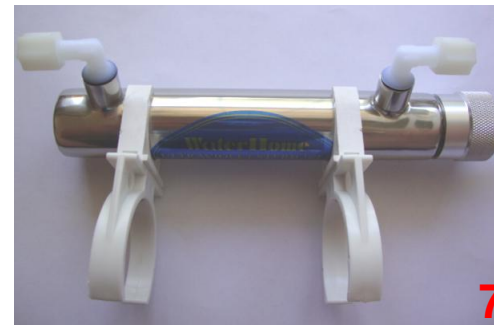

Clip the double side clips on the UV housing, using the smaller ends.